


DrumQuik®MODULAR Chemical Dip-Tube System

Designed Specifically for Drums and IBC Containers
Works with HFC-12, NHS, CQH06 and CQN Couplings

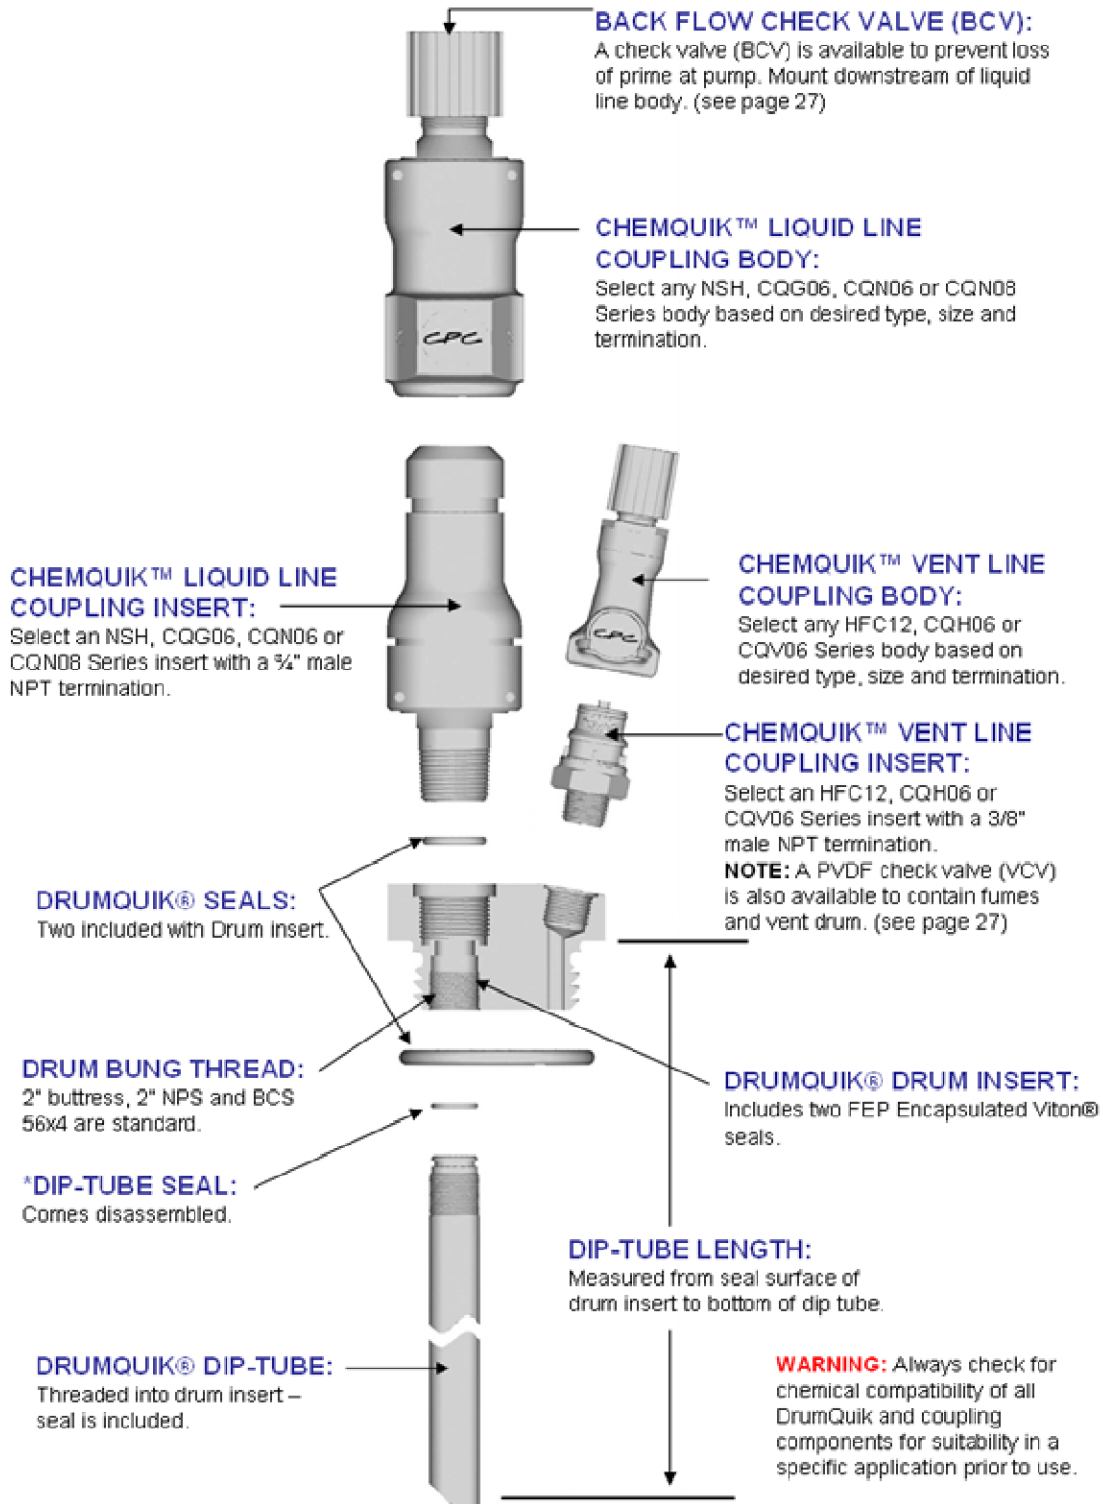

DrumQuik® dip-tubes and mating ChemQuik® or General Purpose couplings provide the system for extracting chemicals from drums and larger OBC/tote containers.

Any standard CPC ChemQuik®, NSH or HFC12 Series coupling set (or even common fit) can be used with the DrumQuik® system to provide instant, safe and reliable connections of c-lines to rigid containers. Simply thread the couplings(s) into the DrumQuik® Drum Insert to the system connection. Then, thread in a Dip Tube of proper length for a perfect match to the IBC/tote. Insert the assembly and your system is complete.